

Installation manual

M Collaboration Floorstand 55"-86"

EAN: 7350105216763

en	Installation manual
ar	تثبيت الجدار
cz	Instalační manuál
da	Installationsmanual
de	Installationsanleitung
ee	Paigaldusjuhend
el	Οδηγίες εγκατάστασης
es	Manual de instalación
fi	Asennusohje
fr	Installation Manuel
he	הנחיות ירידה
hu	Szerelési kézikönyv
it	Manuale di installazione
jp	取り付け説明書
kr	설치 설명서
li	Montavimo instrukcija
lt	Užstādīšanas rokasgrāmata
nl	Installatie handleiding
no	Installasjonshåndbok
pl	Instrukcja instalacji
pt	Manual de instalação
ro	Manual de instalare
ru	Инструкция по установке
sk	Inštaláčny manuál
sl	Navodila za montažo
sv	Installationsmanual
tr	Montaj kılavuzu
zh	安装手册

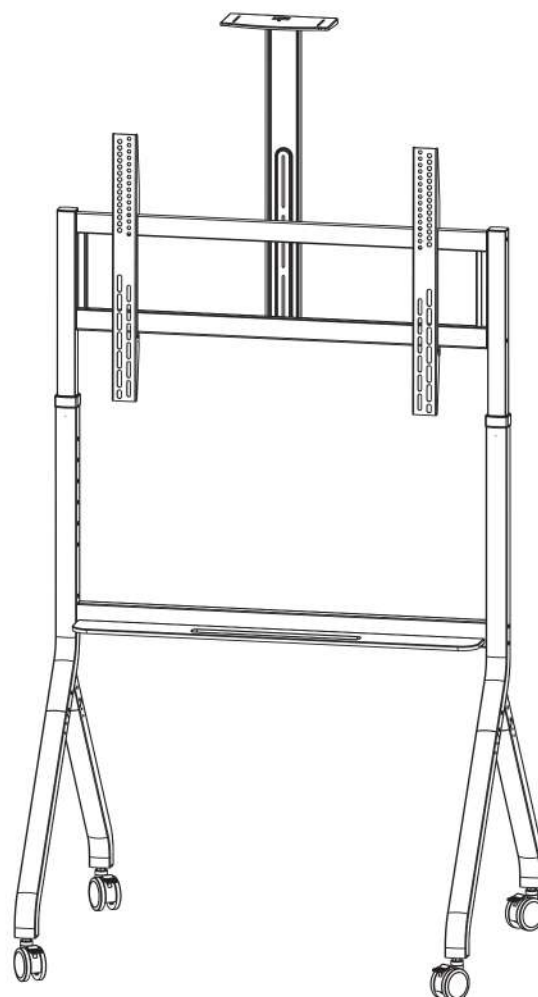 


Table of Contents

Table of Contents and Warning	2/12
Parts list	3/12
1. Legs and Uprights Assembly	4/12
2. Height adjustment	5/12
3. Tray and Crossband Assembly	6/12
4. Pillars and Crossband Assembly	7/12
5. Panel Installation	8/12
6. VESA Mounting Patterns	9/12
7. VESA Rails and TV Assembly	10/12
8. Mounting TV onto Cart	11/12
9. Camera Tray Assembly	12/12









WARNING!

Severe personal injury and property damage can result from improper installation or assembly. Read the following warning carefully before beginning.

- If you do not understand the instructions or have any concerns or questions, please contact a qualified local installer.
 - Do not install or assemble if the product or hardware is damaged or missing, if you require replacement parts, please contact your local distributor for assistance.
 - This product fits most 55"-86" LCD/plasma screen; maximum weight of LCD/plasma screen:200lbs/ 90kg;AV shelf max load:10lbs/4.5kg.
 - Do not use this product for anything other than the original design.
 - This product contains moving parts, please use with caution.
 - The manufacturer disclaims any liability for the modifications, improper installation, or installation over the specified weight range. The manufacturer will not be liable for any damages arising out of the use of, or inability to use, the product.
- All images are for reference, to prevail in product.


Manual							
Tightening Direction	Loosening Direction	Phillips Screwdriver	Meter Ruler	Adjustment	By Hand	Allen key	+ Tightening - Loosening

        Parts List

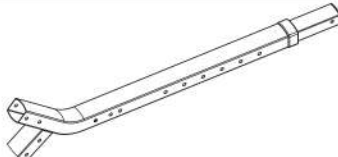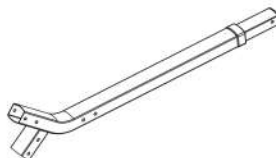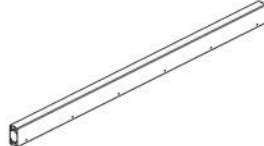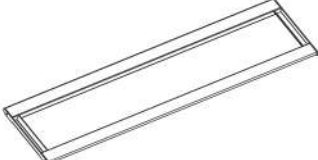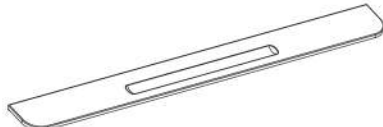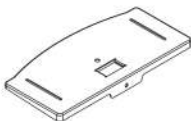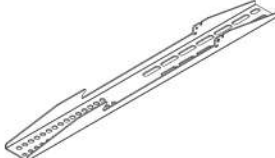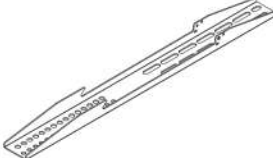
A  Left 1X	B  Right 1X					
C  4X	D  1X					
E  1X	F  1X					
G  1X	H  1X					
I  1X	J  1X					
K  3X						
A1 4X  M10×15mm	B1 4X  M8×25mm	C1 4X  M6×25mm	D1 4X  M5×25mm	E1 4X  Φ16×Φ6.2×1.5mm	F1 4X  Φ15×Φ8.2×10mm	
A2 8X  M8×60mm	B2 16X  M6×10.5mm	C2 8X  φ 8.2× φ 16×1.2mm	D2 11X  M5×10mm	E2 1X 	F2 1X 	G2 1X  5mm

1. Legs and Uprights Assembly

 1.1

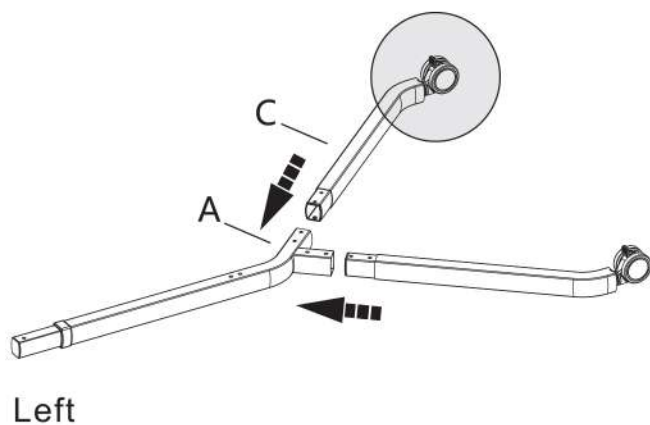

Note:
Curve side inward.

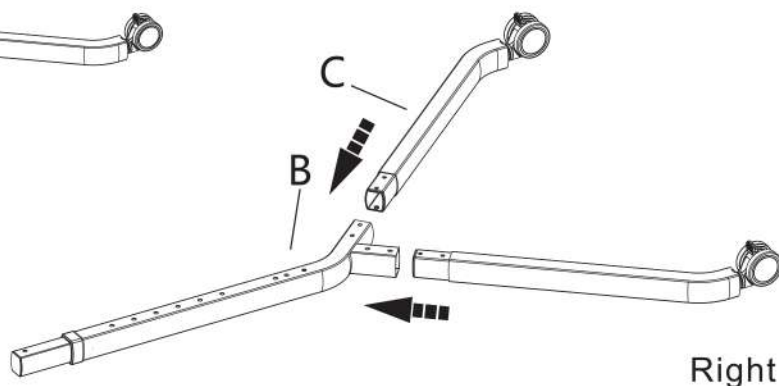 

1.2

 
16PCS




B2



G2

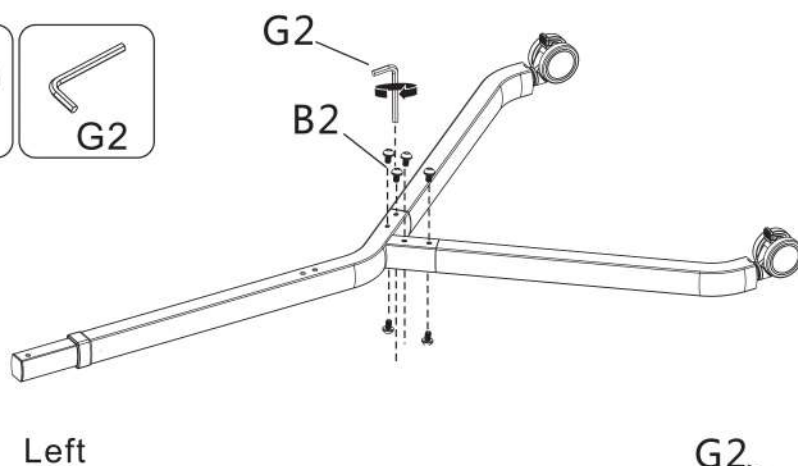


Note:
tighten screws.

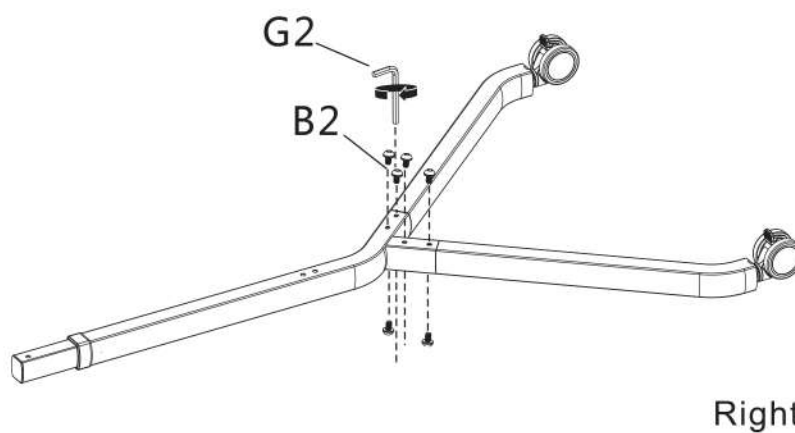 

2. Height adjustment

 2.1

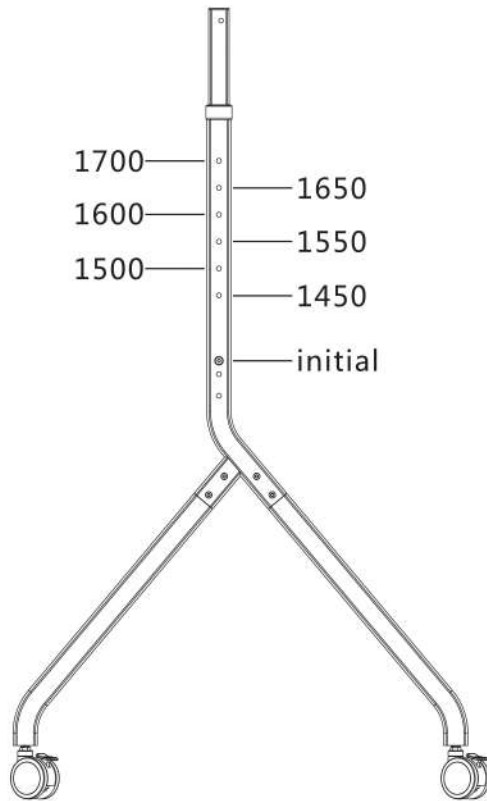


Note:  It is set at initial height. Please adjust to desired height before you use.

Note:  Height on the left is the distance from floor to the center of the TV, if the VESA on TV is centered above and below. otherwise, height for reference only.

Note:  Same height should be adjusted on left and right pillars.

 
2.2

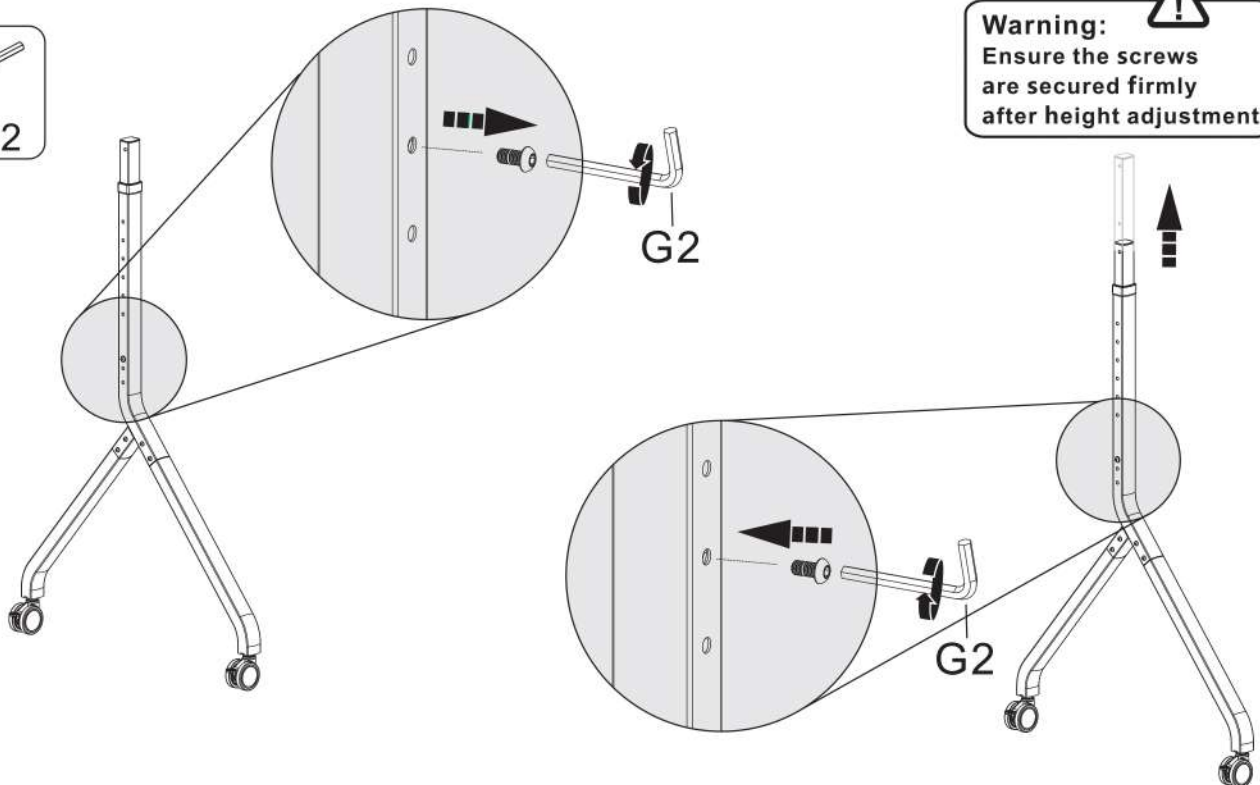

Warning:  Ensure the screws are secured firmly after height adjustment.

3.Tray and Crossband Assembly

 3.1

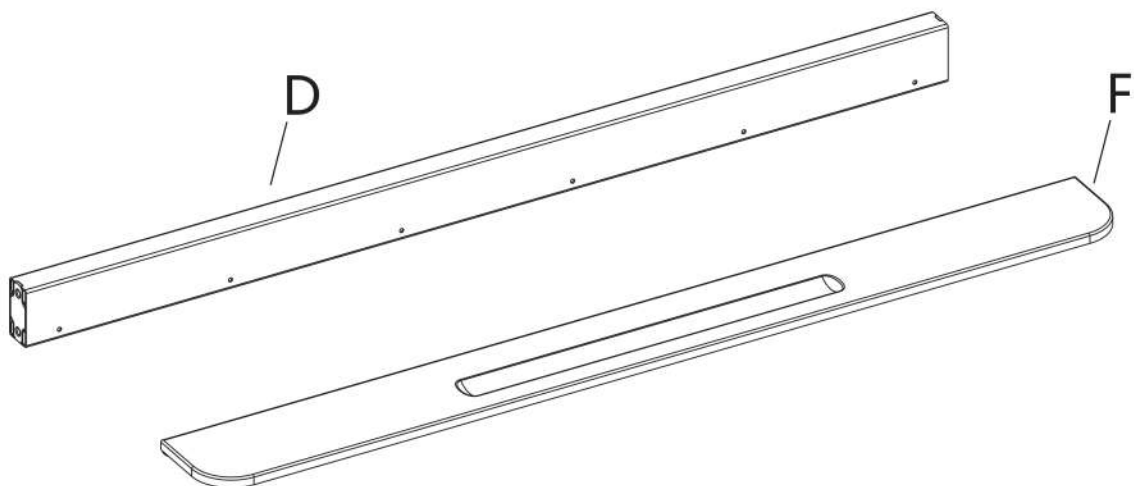


3.2

6PCS



 D2

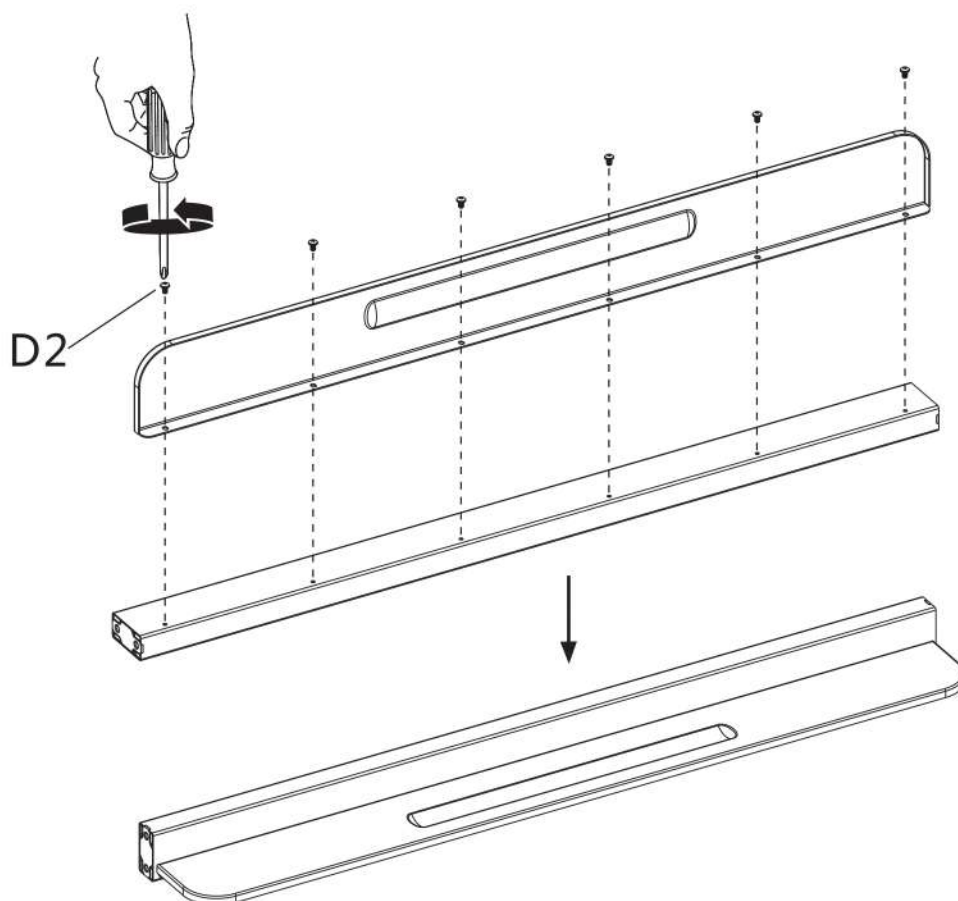


4. Pillars and Crossband Assembly

4.1





Note:
Assembly left and right pillars as per label.

 
Note:
The sides with holes face inward.

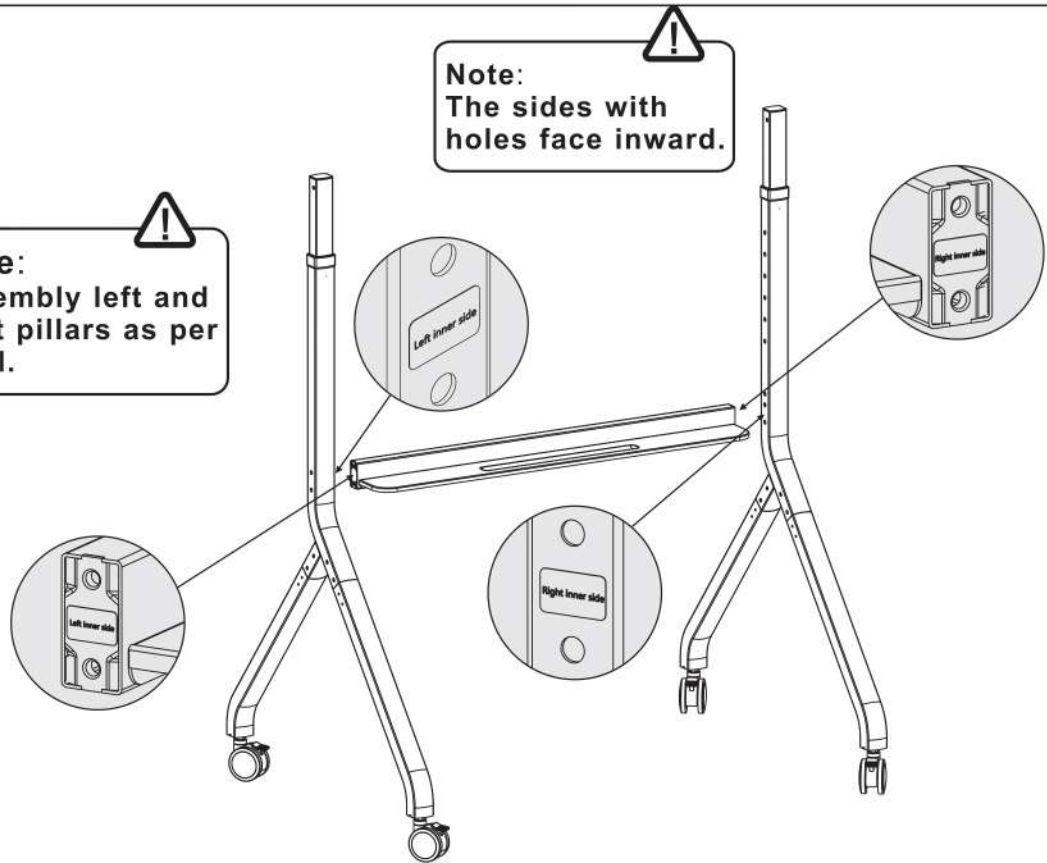

  4.2





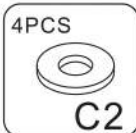
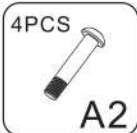


Note:
tighten screws.

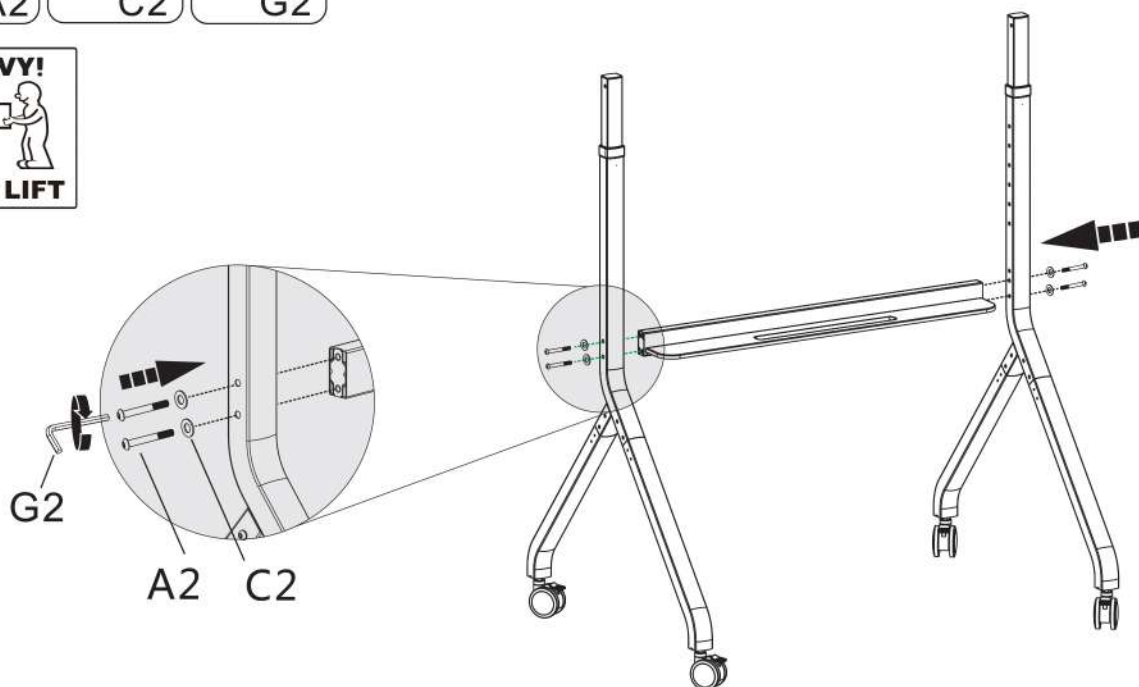 

5. Panel Installation



 
 
 
 
 
 
5.1

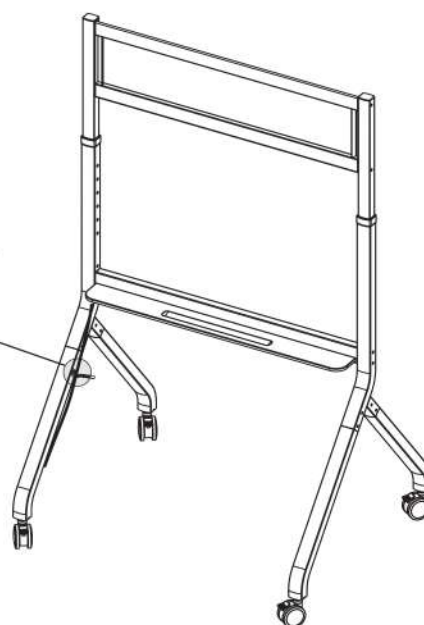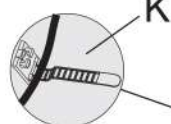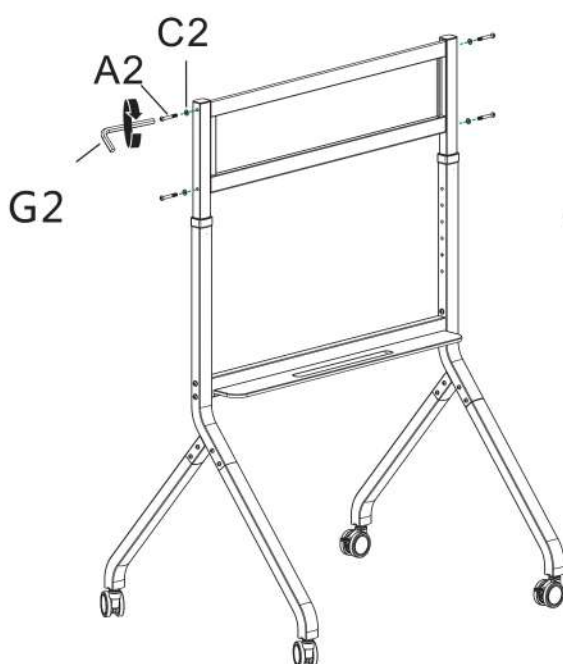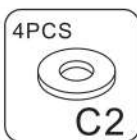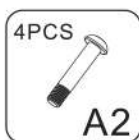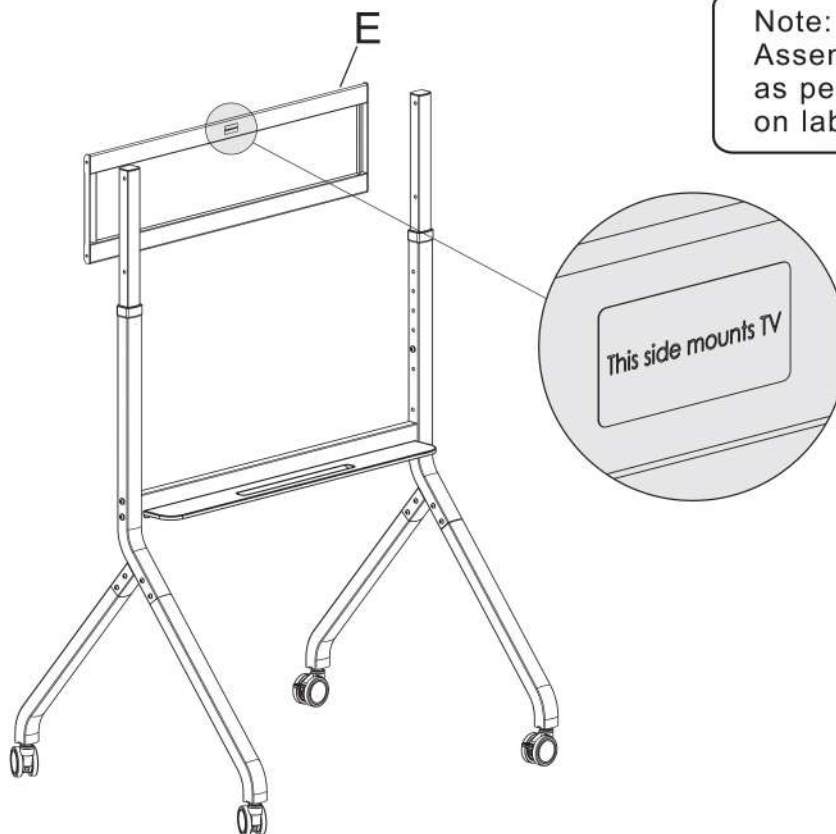

6. VESA Mounting Patterns




6.1

        VESA:200×200-900×600mm

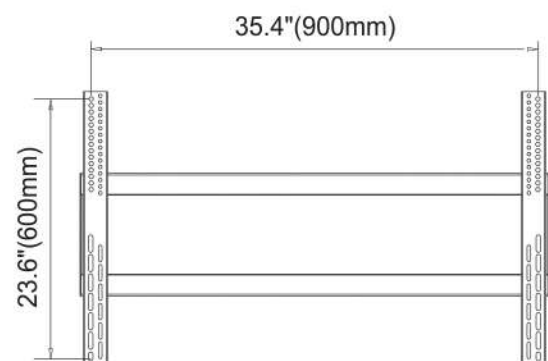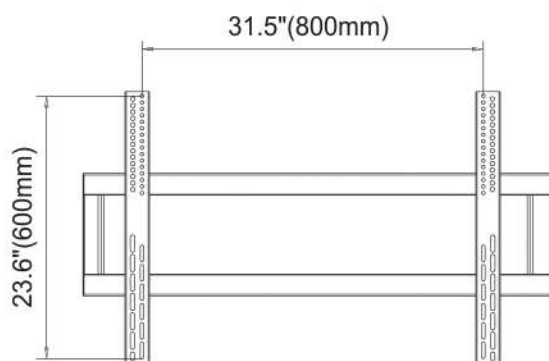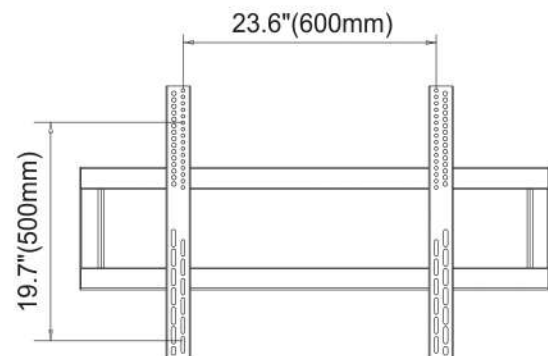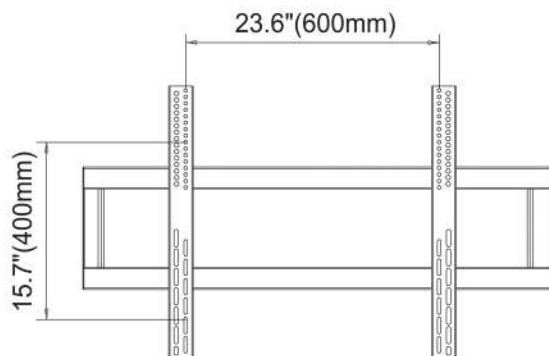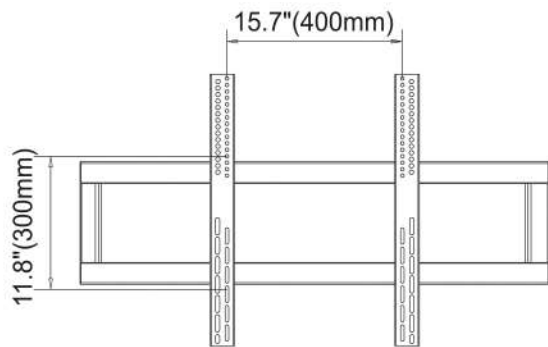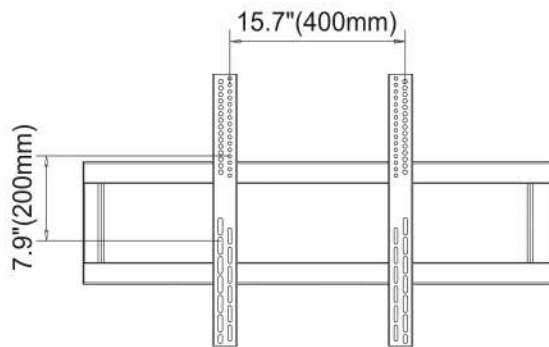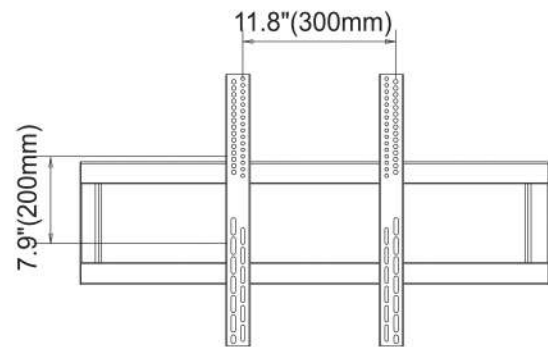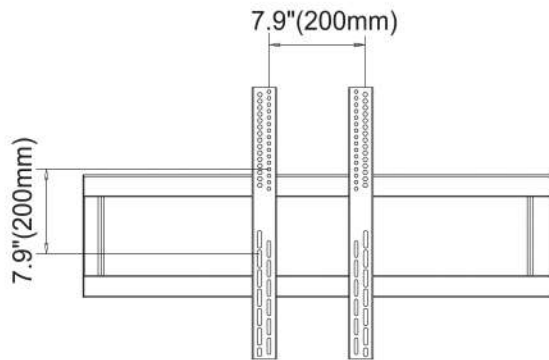

7.VESA Rails and TV Assembly

   
7.1

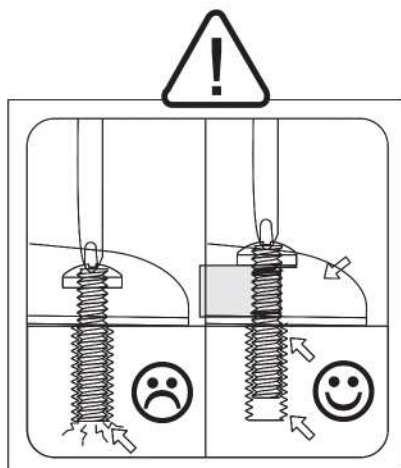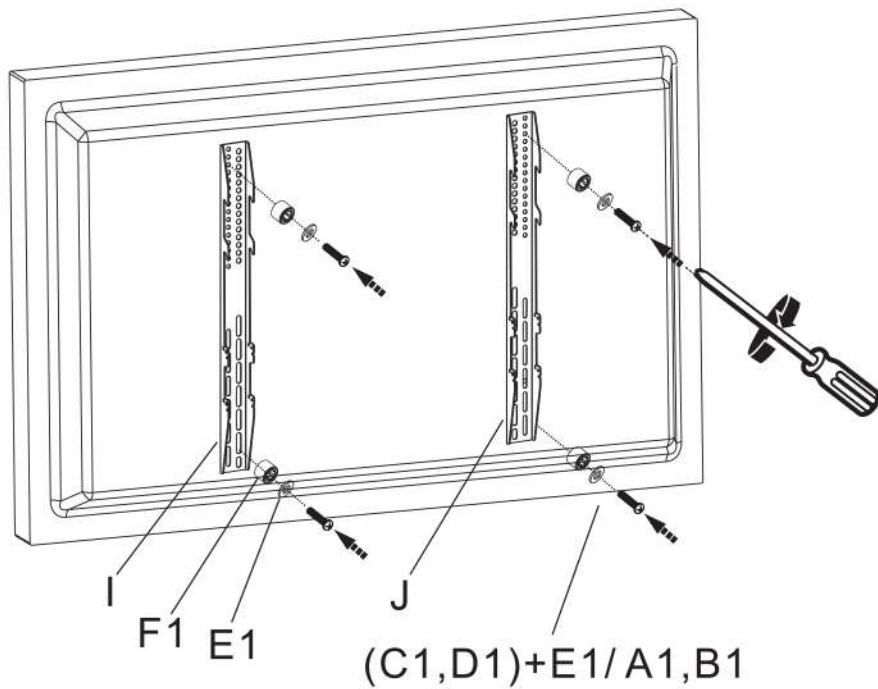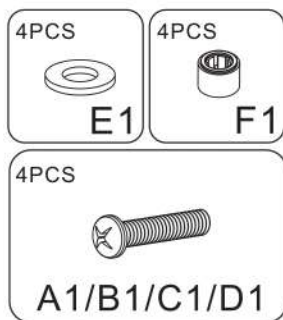


! (Warning symbol)

Note:
tighten screws.

 
M10×15mm(A1)

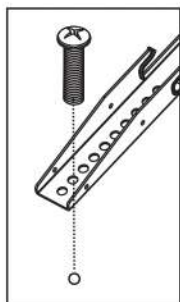

M8×25mm(B1)

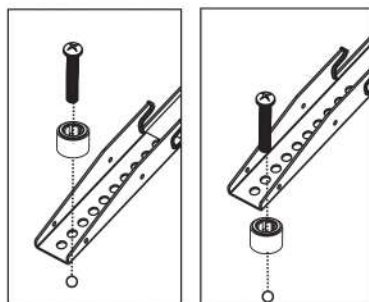 


M5×25mm(D1)
M6×25mm(C1)

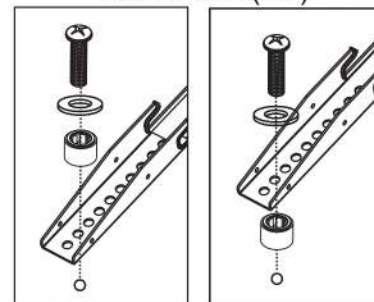 

8. Mounting TV onto Cart

 8.1

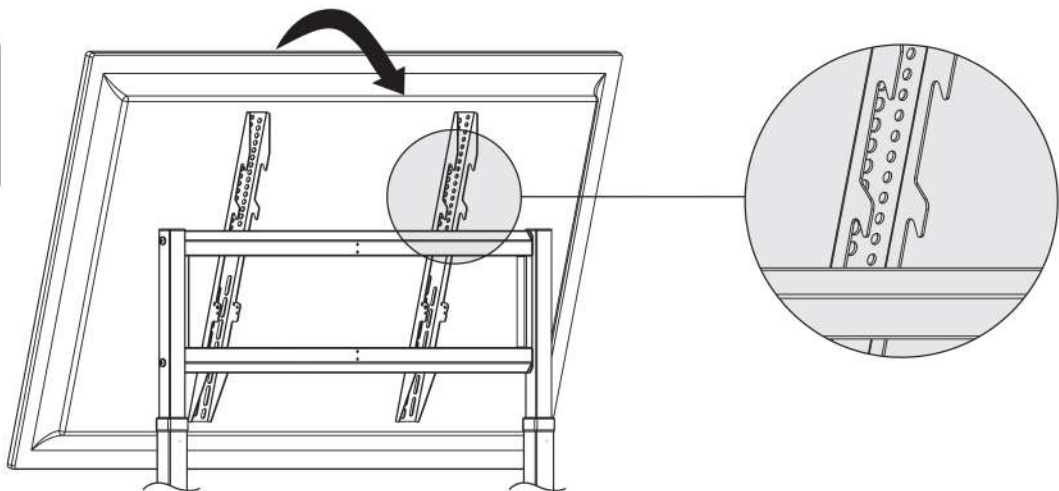


Warning:
Two persons are required to mount TV. Hold TV firmly by the bottom to avoid damage due to slide-off

Warning:
Ensure cart is set at proper height, lest collision between cart and TV

NOTE:
Please fix the rails by the second row of hooks if the TV VESA holes are on the upper side

 8.2

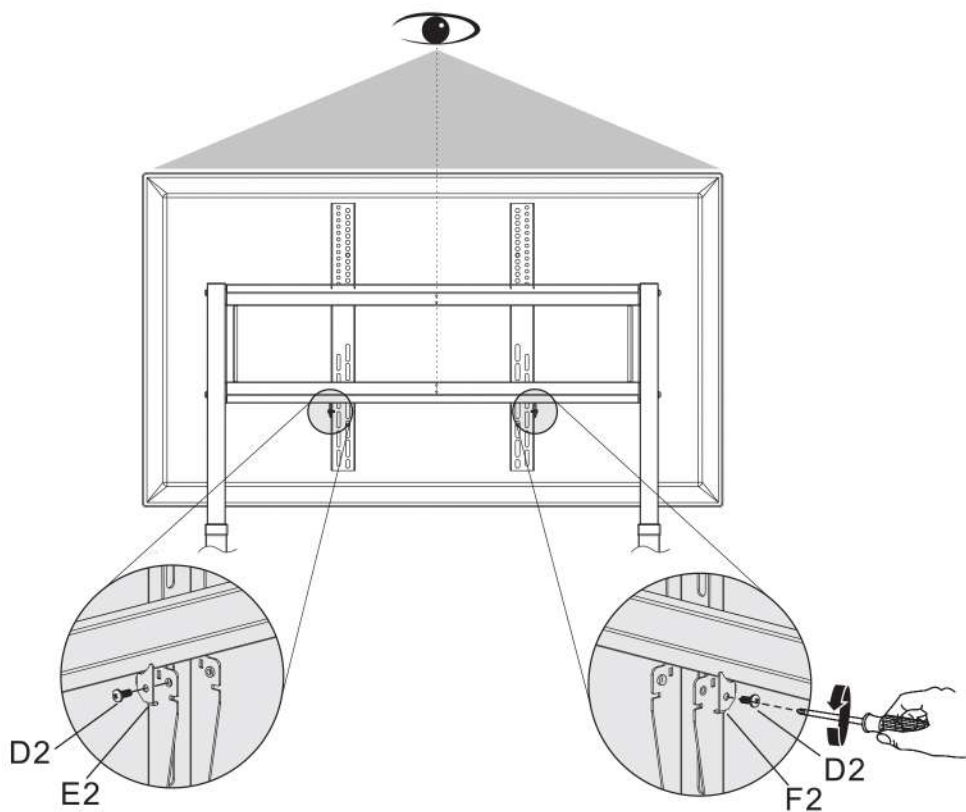

9. Camera Tray Assembly

9.1

 
 
1PCS



D2



Note:
tighten screws.

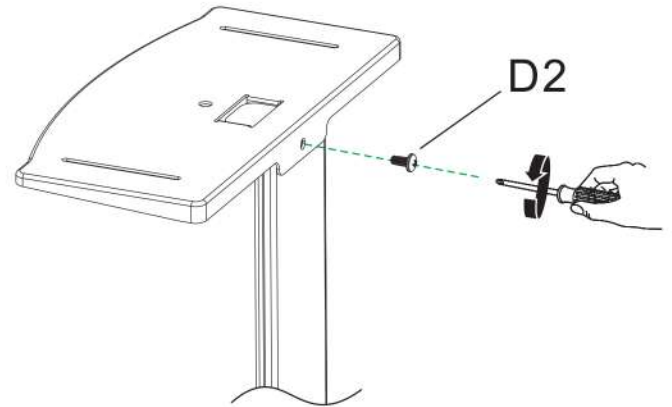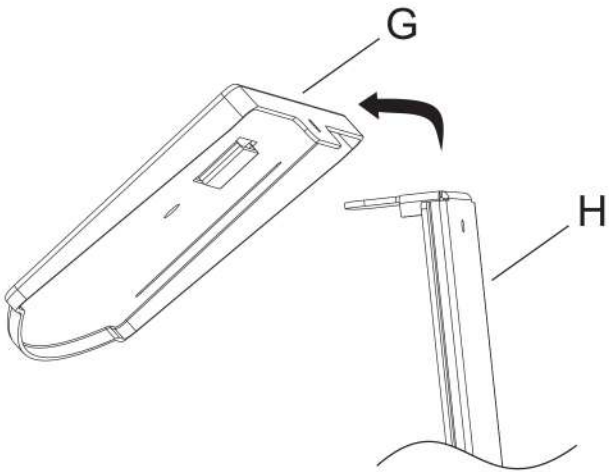

9.2

2PCS



D2



Note:
tighten screws.

